

61 Keys USB Flexible Piano Manual

1. PRODUCT SPECIFICATIONS
2. PRODUCT FEATURES
3. FUNCTIONS
4. PLAY OPERATION
5. TONE LIST (128 TONE)
6. RHYTHM LIST (128 RHYTHM)
7. DEMO SONG LIST (40 SONGS)
8. CARING FOR YOUR SOFT KEYBOARD PIANO
9. CAUTIONS
10. TROUBLESHOOTING

Thank you for purchasing the "SOFT KEYBOARD PIANO".The"SOFT KEYBOARD PIANO" is easy to carry and has been made under very high standards with a focus on meticulous design and production quality control. Before using this product, please read the instruction sheet carefully.


1. PRODUCT SPECIFICATIONS:

- USB Port and MIDI Jack Dual Interface Design
- 61 key (Standard Piano Key 5 Octave + 1 key)
- Tone:128
- Rhythm:128
- Demonstration Songs: 40
- Rated Voltage:DC 6V(Battery AA 1.5V × 4pcs)
- Output: 500mW
- Size: main body:9.6(L) ×22.8(W) × 3.3(D)cm
Keyboard:88(L) × 17.4(W) ×0.5(D)cm

2. PRODUCT FEATURES:

- I. The "SOFT KEYBOARD PIANO" is small and can be hand carried. It can also be rolled up for easy storage in your hand bag or carrying case.
- II. You can select the "SOFT KEYBOARD PIANO" for more advanced students of the piano.
- III. The "SOFT KEYBOARD PIANO" has many functions which you can select on the control box:
 - ❖ 128 Tone Functions (See Tone List Attachment)
 - ❖ 128 Rhythm Options (See Rhythm List Attachment)
 - ❖ Add 001 - 100 Control Keyboard)
 - ❖ 40 Demo Songs (See Demo Song List Attachment)
 - ❖ Music Recording: Max 336 Notes
- IV. The "SOFT KEYBOARD PIANO" uses 4 PCS 2AA 1.5v batteries which can last for up to 12-15 hours of playing time. You can also plug the piano into proper electrical outlet with an adaptor.

3. FUNCTIONS

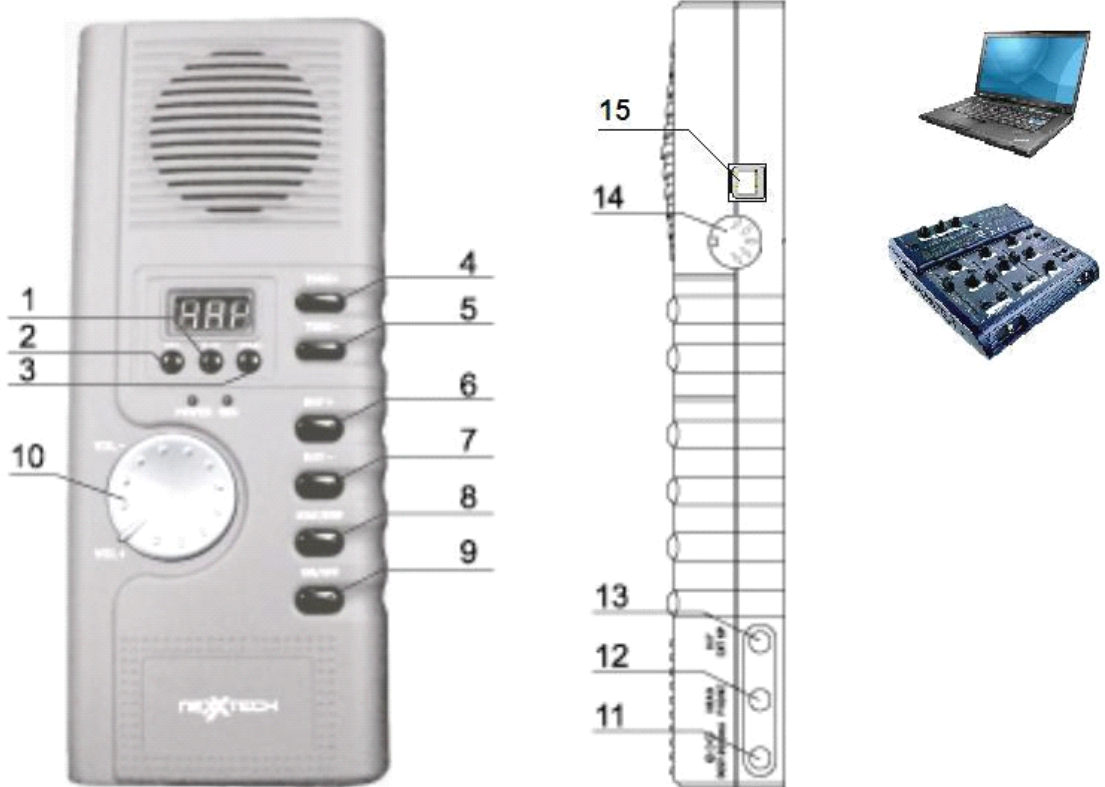

Function Key	Description
1. PLAY	Play the Recorded Music
2. REC	Record Key
3. DEMO	Demonstration Key
4. TONE-	Tone Selection Key
5. TONE+	Tone Selection Key
6. RHY+	Beat Selection Key
7. RHY-	Beat Selection Key
8. START/STOP	Start/Stop Demo song or Rhythm Key
9. ON/OFF	Power Key
10. VOL+/VOL-	Master Volume Control Knob
Interface	Description
11. DC 6V	DC Jack Connect DC(6V)
12. HEAD PHONE	Head Phone Jack
13. OUT EXT SP	Speaker Jack
14. MIDI	MIDI Out Jack
15. USB	USB Interface to synchronize your computer

4. PLAY OPERATION

■ Play Mode:

- Press the **ON/OFF** button to switch on the piano. The LED display and POWER LED will light up. The LED display will show **000** and the setting will be on TONE 000.
- Press the TONE+ and TONE- button to select the tone of playing. The selected data will be displayed in the LED.
- You can also set the rhythm for playing at the same time.

■ Rhythm Mode:

- Press the START/STOP button to enter the rhythm option.
- Use the RHY+ button or RHY- button to choose a rhythm option.
- Press the TONE+ and TONE- button to select the tone for playing.

■ Record Mode:

- Press the REC button to enter the record mode, and the LED will display REC, then the piano is ready to record notes.
- When the piano enters the record mode, you can play the music as you please. The system will record what you have played (max 336 notes). If the Record area is full, the LED Display shows "FUL". When it is full, the display keeps to show "FUL", you can press the PLAY button to replay the recorded music, or you can press the REC button to exit record mode.
- Under the record mode, Press the REC button to exit record mode, and LED display OFF, then return to normal status.
- Under the record mode, Press the PLAY button to replay the recorded music. But it must be based on some notes having been recorded.
- During the playing back process, you can press the TONE+ and TONE- button to change the tone of the notes recorded.
- When the system resets or exits record mode or records again, previously recorded notes will be cleared automatically.

■ Demo Song Mode:

- Press the Demo button to enter the demo song playing status.
- Press the Demo button to select any demo song one by one.
- Press the Tone+ and Tone- button to change the thematic tone when the demo song is playing.

Others:

1. If you do not play any key for 2 minutes, the system will shut off automatically, then enter the power-saving mode and put out the LED display.
2. When playing the demo songs or rhythms, press the START/STOP button may stop the playing; in the normal mode, press the START/STOP button may enter the rhythm functions.
3. When the system shuts off automatically, press the ANY KEY to awake it. And then enter the playing mode, LED displays 000.

- DC 6V JACK: insert the DC 6V power adapter into this jack in order to use the piano without batteries.
- HEADPHONE JACK: Connect stereo headphones to it.
- OUT EXT SP JACK: Connect an external speaker to this jack.

5. TONE LIST

NO.	Rhythm Name	NO.	Rhythm Name	NO.	Rhythm Name
000	Acoustic Grand Piano	043	Contrabass	086	Lead 7 (Fifths)
001	Bright Acoustic Piano	044	Tremolo Strings	087	Lead 8 (Bass+Lead)
002	Electric Grand Piano	045	Pizzicato Strings	088	Pad 1 (New age)
003	Honky-tonk Piano	046	Orchestral Harp	089	Pad 2 (Warm)
004	Rhodes Piano	047	Timpani	090	Pad 3 (Polysynth)
005	Chorused Piano	048	String Ensemble 1	091	Pad 4 (Choir)
006	Harpsichord	049	String Ensemble 2	092	Pad 5 (Bowed)
007	Clavichord	050	Synth Strings 1	093	Pad 6 (Metallic)
008	Celesta	051	Synth Strings 2	094	Pad 7 (Halo)
009	Glockenspiel	052	Choir Aahs	095	Pad 8 (Sweep)
010	Music box	053	Voice Oohs	096	PX 1 (Rain)
011	Vibraphone	054	Synth Voice	097	PX 2 (Soundtrack)
012	Marimba	055	Orchestra Hit	098	PX 3 (Crystal)
013	Xylophone	056	Trumpet	099	PX 4 (Atmosphere)
014	Tubular Bells	057	Trombone	100	PX 5 (Brightness)
015	Dulcimer	058	Tuba	101	PX 6 (Goblins)
016	Hammond Organ	059	Muted Trumpet	102	PX 7 (Echoes)
017	Percussive Organ	060	French Horn	103	PX 8 (Sci-Fi)
018	Rock Organ	061	Brass Section	104	Sitar
019	Church Organ	062	Synth Brass 1	105	Banjo
020	Reed Organ	063	Synth Brass 2	106	Shamisen
021	Accordion	064	Soprano Sax	107	Koto
022	Harmonica	065	Alto Sax	108	Kalimba
023	Tango Accordion	066	Tenor Sax	109	Bagpipe
024	Acoustic Guitar (nylon)	067	Baritone Sax	110	Fiddle
025	Acoustic Guitar (steel)	068	Oboe	111	Shanai
026	Electric Guitar (jazz)	069	English Horn	112	Tinkle Bell
027	Electric Guitar (clean)	070	Bassoon	113	Agogo
028	Electric Guitar (muted)	071	Clarinet	114	Steel Drums
029	Overdriven Guitar	072	Piccolo	115	Woodblock
030	Distortion Guitar	073	Flute	116	Taiko Drum
031	Guitar Harmonics	074	Recorder	117	Melodic Tom
032	Acoustic Bass	075	Pan Flute	118	Synth Drum
033	Electric Bass(finger)	076	Bottle Blow	119	Reverse Cymbal
034	Electric Bass (pick)	077	Shakuhachi	120	Guitar Fret Noise
035	Fretless Bass	078	Whistle	121	Breath Noise
036	Slap Bass 1	079	Ocarina	122	Seashore
037	Slap Bass 2	080	Lead 1 (Square)	123	Bird Tweet
038	Synth Bass 1	081	Lead 2 (Sawtooth)	124	Telephone Ring
039	Synth Bass 2	082	Lead 3 (Calliope lead)	125	Helicopter
040	Violin	083	Lead 4 (Chiff lead)	126	Applause
041	Viola	084	Lead 5 (Charagn)	127	Gunshot
042	Cello	085	Lead 6 (Voice)		

6. RHYTHM LIST

NO.	Rhythm Name	NO.	Rhythm Name	NO.	Rhythm Name
000	8 Beat 1	043	Roke `N` Roll 4	086	Mambo
001	POP 1	044	Ragtime	087	Dixieland
002	8 Beat 4	045	8 Beat Roke 2	088	Big Band 2
003	House 1	046	POP Groove 2	089	House 4
004	Slow Roke 1	047	Ballad 2	090	Oriental 5
005	Country 1	048	Ballad 3	091	Country 5
006	8 Beat 2	049	Ballad 4	092	Chinese 7
007	8 Beat Roke 1	050	Oriental 4	093	Bluegrass
008	16 Beat 4	051	Chinese 2	094	Spice Groove 4
009	Oriental 1	052	Chinese 3	095	Beguine
010	Oriental 2	053	Swing 1	096	Chinese 8
011	Oriental 3	054	Spice Groove 2	097	Blackie Beat 1
012	Country Roke 1	055	Swing 2	098	POP 7
013	Country Roke 2	056	Chinese 4	099	Soul 4
014	Eurobeat 1	057	Chinese 5	100	Soul Roke
015	Eurobeat 2	058	R&B 1	101	Country Ballad 1
016	Eurobeat 3	059	Swing 3	102	Polka
017	Big Band 1	060	House 3	103	DanceFunk
018	Spice Groove 1	061	March 1	104	R&B 5
019	Slow Roke 2	062	March 2	105	WordPop
020	Dance 1	063	March 3	106	House 5
021	Slow Roke 3	064	POP 4	107	Boogie Woogie
022	Disico 1	065	Slow Roke 4	108	Big Band 3
023	Country Roke 3	066	Dance 4	109	Big Band 4
024	Roke `N` Roll 1	067	Waltz	110	Cha-Cha
025	Country Roke 4	068	Spice Groove 2	111	Chinese 9
026	Roke `N` Roll 2	069	Soul 2	112	Dangdut
027	Country 2	070	Soul 3	113	Pop Malay
028	Country Roke 5	071	POP Groove 2	114	Pop Shuffle
029	Eurobeat 4	072	Chinese 6	115	70`s Roke 1
030	Soul 1	073	POP 5	116	70`s Roke 2
031	POP 2	074	R&B 2	117	March 4
032	Dance 2	075	POP Groove 3	118	90`s Disico
033	Country 3	076	Disico 2	119	Bossa Nova
034	Country 4	077	POP Groove 4	120	90`s POP
035	Chinese 1	078	R&B 3	121	Blackie Beat 2
036	8 Beat Roke 2	079	POP 6	122	TripHop1
037	POP 3	080	R&B 4	123	Slow Dance
038	POP Groove 1	081	Heavy Metal 1	124	Country Ballad 2
039	Ballad 1	082	Tango	125	Chinese 10
040	Dance 3	083	Disico3	126	Big Band 5
041	House 2	084	Heavy Metal 2	127	TripHop2
042	Roke `N` Roll 3	085	50`s Roke		

7. DEMO SONG LIST

NO.	Song Name	NO.	Song Name
000	Blue Danube	020	Jasmine Flower
001	Sweet Smil	021	Sinkiang Dance
002	Lyphard Melody	022	Romance Anomino
003	Ballade For Adeline	023	Dance of Litde Four Swans
004	Turkish March	024	Breakfast at Tiffany1s
005	Friendship Everlasting	025	Pig Angel Back His Wife
006	March of The Toreadors	026	Song of Joy
007	If You Are Happy	027	Brilliant Waitz
008	For Elise	028	Swan Lack
009	Green Sleeves	029	Serenade of Mozart
010	Childhood Memory	030	Love is Blue
011	Liang Zhu	031	Don` t Go
012	Fields of Fortune	032	Doracmon
013	Music Instantaneous	033	Prcmiers sour
014	Radetzky March	034	Sealed.With a Kiss
015	Beer Barrel Polka	035	Serenade of Heykens
016	Can You Feel The Love Tonight	036	Whispers in fall
017	Spain Bullfighter	037	Moon River
018	Spring`s Voice Waltz	038	I Just Called to Say I Love You
019	Maiden`s Prayer	039	Days On My Past

8. CARING FOR YOUR SOFT KEYBOARD PIANO

- I.** The Usage of Battery
 - A. Do not use rechargeable batteries.
 - B. Do not dispose of batteries in a fire;the batteries may explode or leak.
 - C. Do not mix alkaline,standard(CARBON-ZINC) or rechargeable. (NICKEL-CADMIUM) batteries.
 - D. Do not mix old and new batteries.
 - E. Be sure to insert batteries.
 - F. Exhausted batteries should be removed from the product.
- II.** Clear the piano with a piece of soft and dry cloth.
- III.** Please roll up the keyboard properly and place it into the carrying bag after use.
- IV.** Do not store the piano in high temperature and high humidity.

9. CAUTIONS

- I.** When the unit is not being used, it is recommended that you remove all batteries from the battery compartment. This will safeguard against any damage to the piano from battery leakage.
- II.** When using the adaptor, make sure that the batteries are removed.
- III.** If you use the piano by means of an electrical outlet, always switch off the piano and remove the adaptor from the piano after use.
- IV.** Keep the keyboard level when in use. Do not place on uneven surface or move the keyboard around while playing. This may damage the functions.
- V.** Do not tamper with the wiring of this product with a cutter or other sharp tools. It may damage the keyboard functions.
- VI.** When rolling up the keyboard after use, do not roll it too tight.
- VII.** Do not pull or twist the body or keyboard.
- VIII.** Do not place the piano near areas with strong electric waves. The waves may affect and damage the product functions.
- IX.** Do not separate any of the piano's parts.
- X.** Do not use the piano in a wet or dusty area.
- XI.** Avoid usage and storage in high temperature or high humidity. High temperatures and moisture may cause the product malfunction.

10. TROUBLE SHOOTING

- I.** If the Soft keyboard Piano stops operating while you are playing, it may be the batteries have been exhausted. Insert new batteries at this time. (This pertains to if you are not using an electrical outlet to power your piano)
- II.** If there is an interruption in sound quality or a piano key malfunction, press the ON/OFF button to turn off the piano. Then press the ON/OFF button again to turn on the piano and to reset it to its original settings.