

1. Feature

- * 20 messages: A-T, 120 letter every message
- * 2 fonts (**HELLO**).
- * Western chars sets (Spanish/French...)
- * 5 speeds, 2 brightness
- * 10 animation icons.
- * 7 Keys to input message manually.
- * Menu editing. Easy to input, delete, modify messages
- * Communication via a PC
- * Work 24 hours with a CR2032 Lion battery .
- * Work 5 hours with a Li2032 recharge battery

2. If communication via a PC, please refer to the software specification see more detail.

3. Input method of 7 keys keypad.

3.1 On normal running state.

Key	Function
ESC	Enter the main menu
DEL	Disable the message
ENT	Stop moving / Hold the screen
UP	Play previous message
DOWN	Play next message
<- ->	2 brightness 50%, 100%

3.2 On the main menu state.

There're 3 menu items in Main Menu,

- 1. TXT** (Edit the Message)
- 2. FMT** (Initial the System)
- 3. DMO** (Show demo)

3.3 Enter menu "1.TXT" to edit the text message.

Press **ENT** while in menu item "**1.TXT**", show

A x

Describe	
A	Total 20 messages, form A to T , 120 characters every messages.
Selected	Enable or Disable running
Speed	5 running speed gear
x	Show the text of current message

Key	Function
ESC	Exit to the main menu
DEL	Delete Message after show dialogue "DELE?" ENT to delete and ESC to cancel.
ENT	Enter the Edit Function, "j" means the end of the text.
Cursors	Browse Message name Letter, Speed and Disable/Enable running selection.

3.4 Edit the text

Key	Function Detail
ESC	End editing and back to the main menu "1.TXT"
DEL	Delete the cursor position character e.g. " ABCD " Change to " ABD "
ENT	<p><u>Notice:</u></p> <p>Press the ENT key to launch the <u>Input Box</u> to enter a new character. At first, "ABCDE" and cursor will be displayed.</p> <p>When enter the <u>Input Box</u>, show: "ABCDE", then,</p> <ol style="list-style-type: none"> 1. Press ENT to input the cursor position text in "ABCDE" to the message. 2. Press ESC to switch the text sets: such as <ul style="list-style-type: none"> -> ABCDE -> abcde -> 01234 -> \$@#% special chars -> Western language letter. 3. Press DEL, change the fonts ,such as ABCDE to ABCDE. 4. Press cursor UP and DOWN , to browse the page of char sets. <ul style="list-style-type: none"> ABCDE -> FGHIJ 5. Press cursor LEFT, RIGHT to move the cursor.
UP/Down	Modify the current cursor character B>A>@... or A>B>C...
<- and ->	Move cursor to Next or Prep position

Demo Input "Hello, world! \$1.0'

- Step 1, Press ESC to 1.TXT
- Step 2, Press ENT to A**x
- Step 3, Press ENT to "j"
- Step 4, Press ENT to Input Box "ABCDE"
- Step 5, Press DEL to choose wide chars
- Step 6, Press Cursor to choose 'H'
- Step 7, Press ENT to enter the 'H'
- Step 8, Press ENT to Input Box again....

